

Welcome to Södra



Call before you arrive to the Measuring Station

Follow the yellow line,
and park at the scale



Park truck on the scale



Park truck on the scale.

Call one of the number below

- 0340 628170
- 0340 628171


Describe what you will load,

➤ In this case Pellets

You will receive a number [Scale-card].


Enroll the number at the screen.

➤ The scale calculates the empty weight of the truck

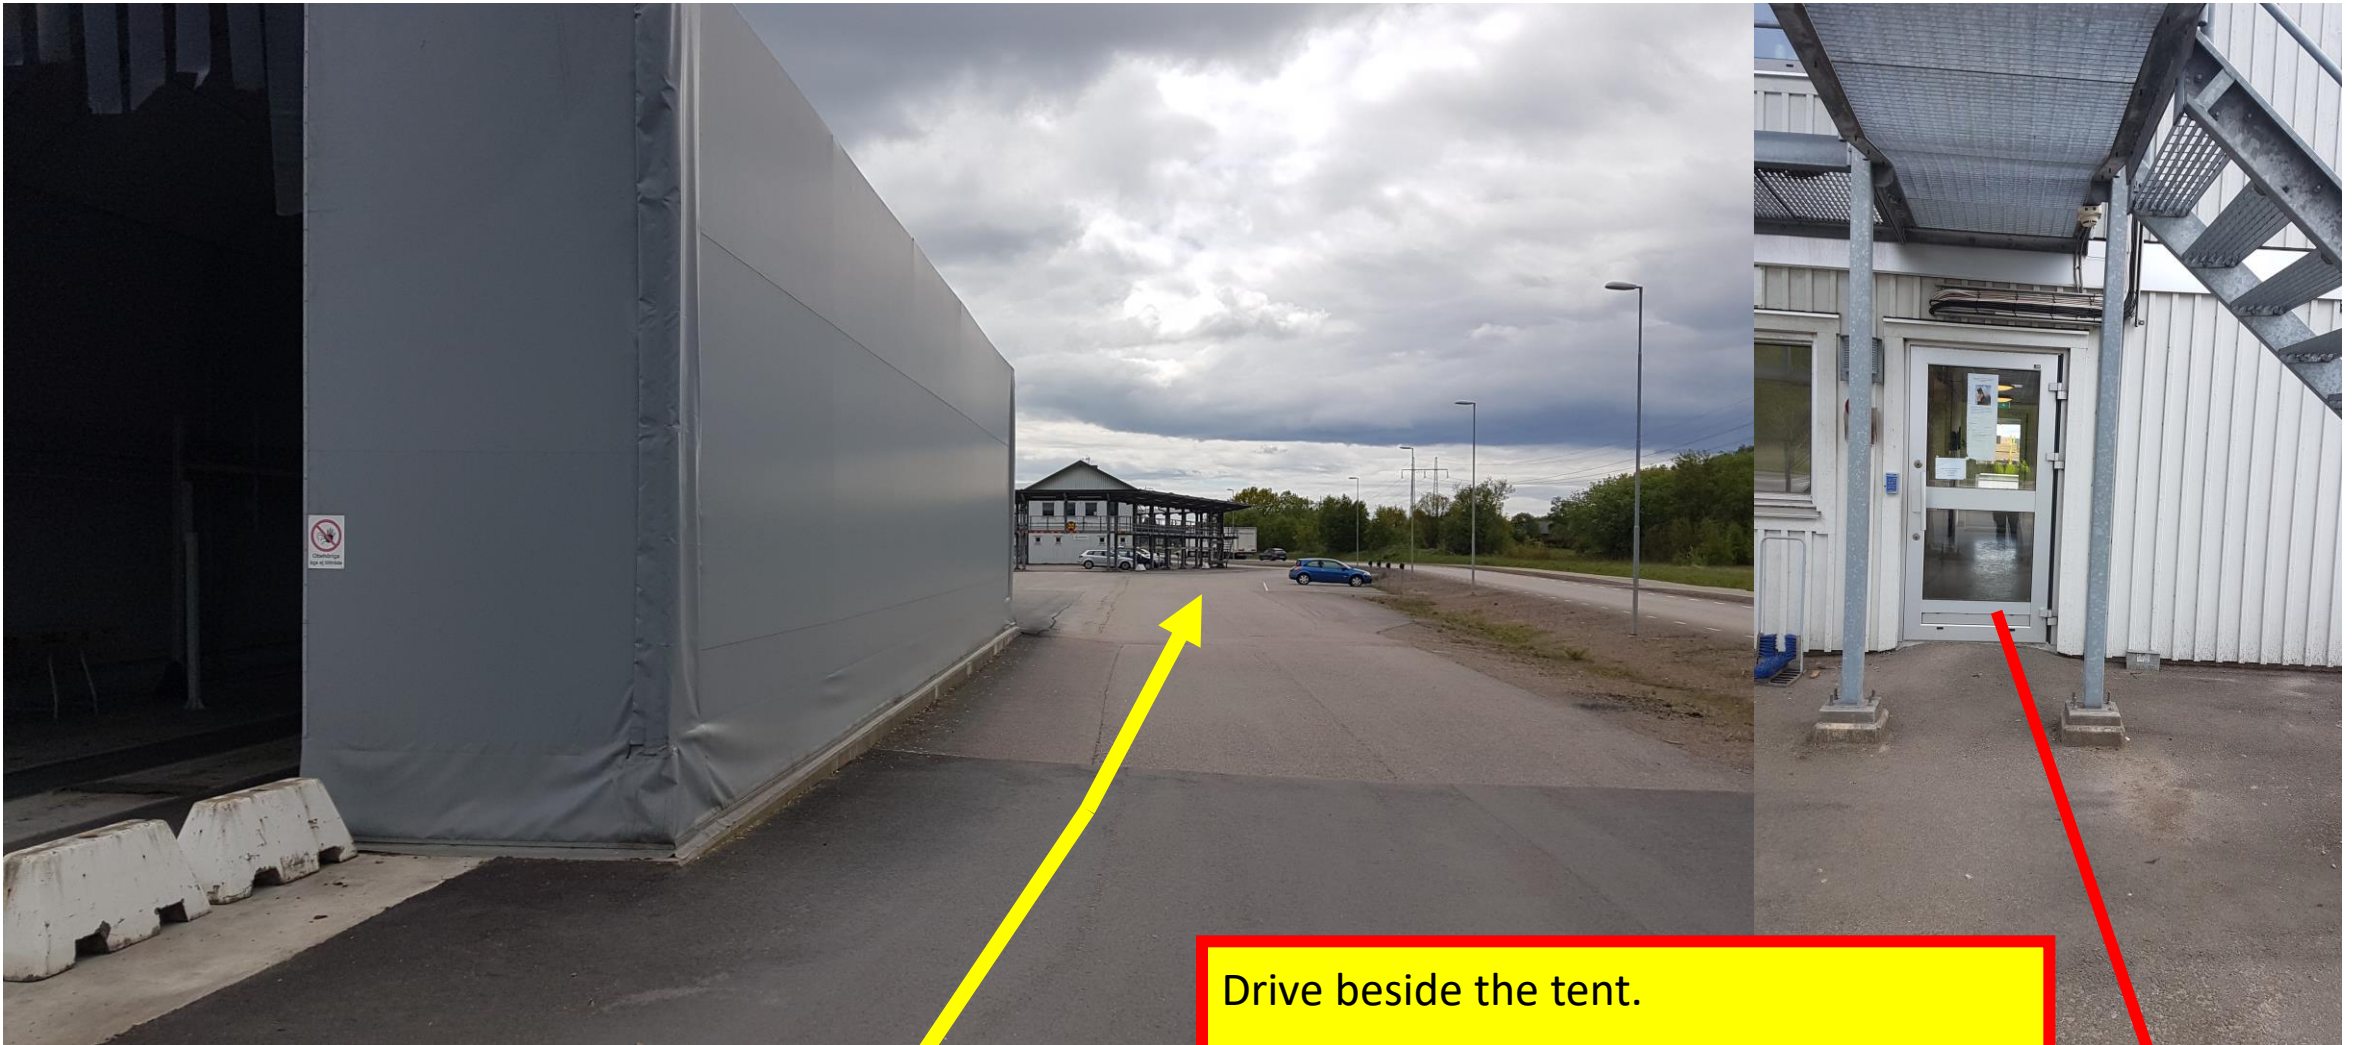

Drive beside the tent.

To have access to the gate, you must receive a SSG-card. You get the card in the reception at the Measuring Station. [Second floor].

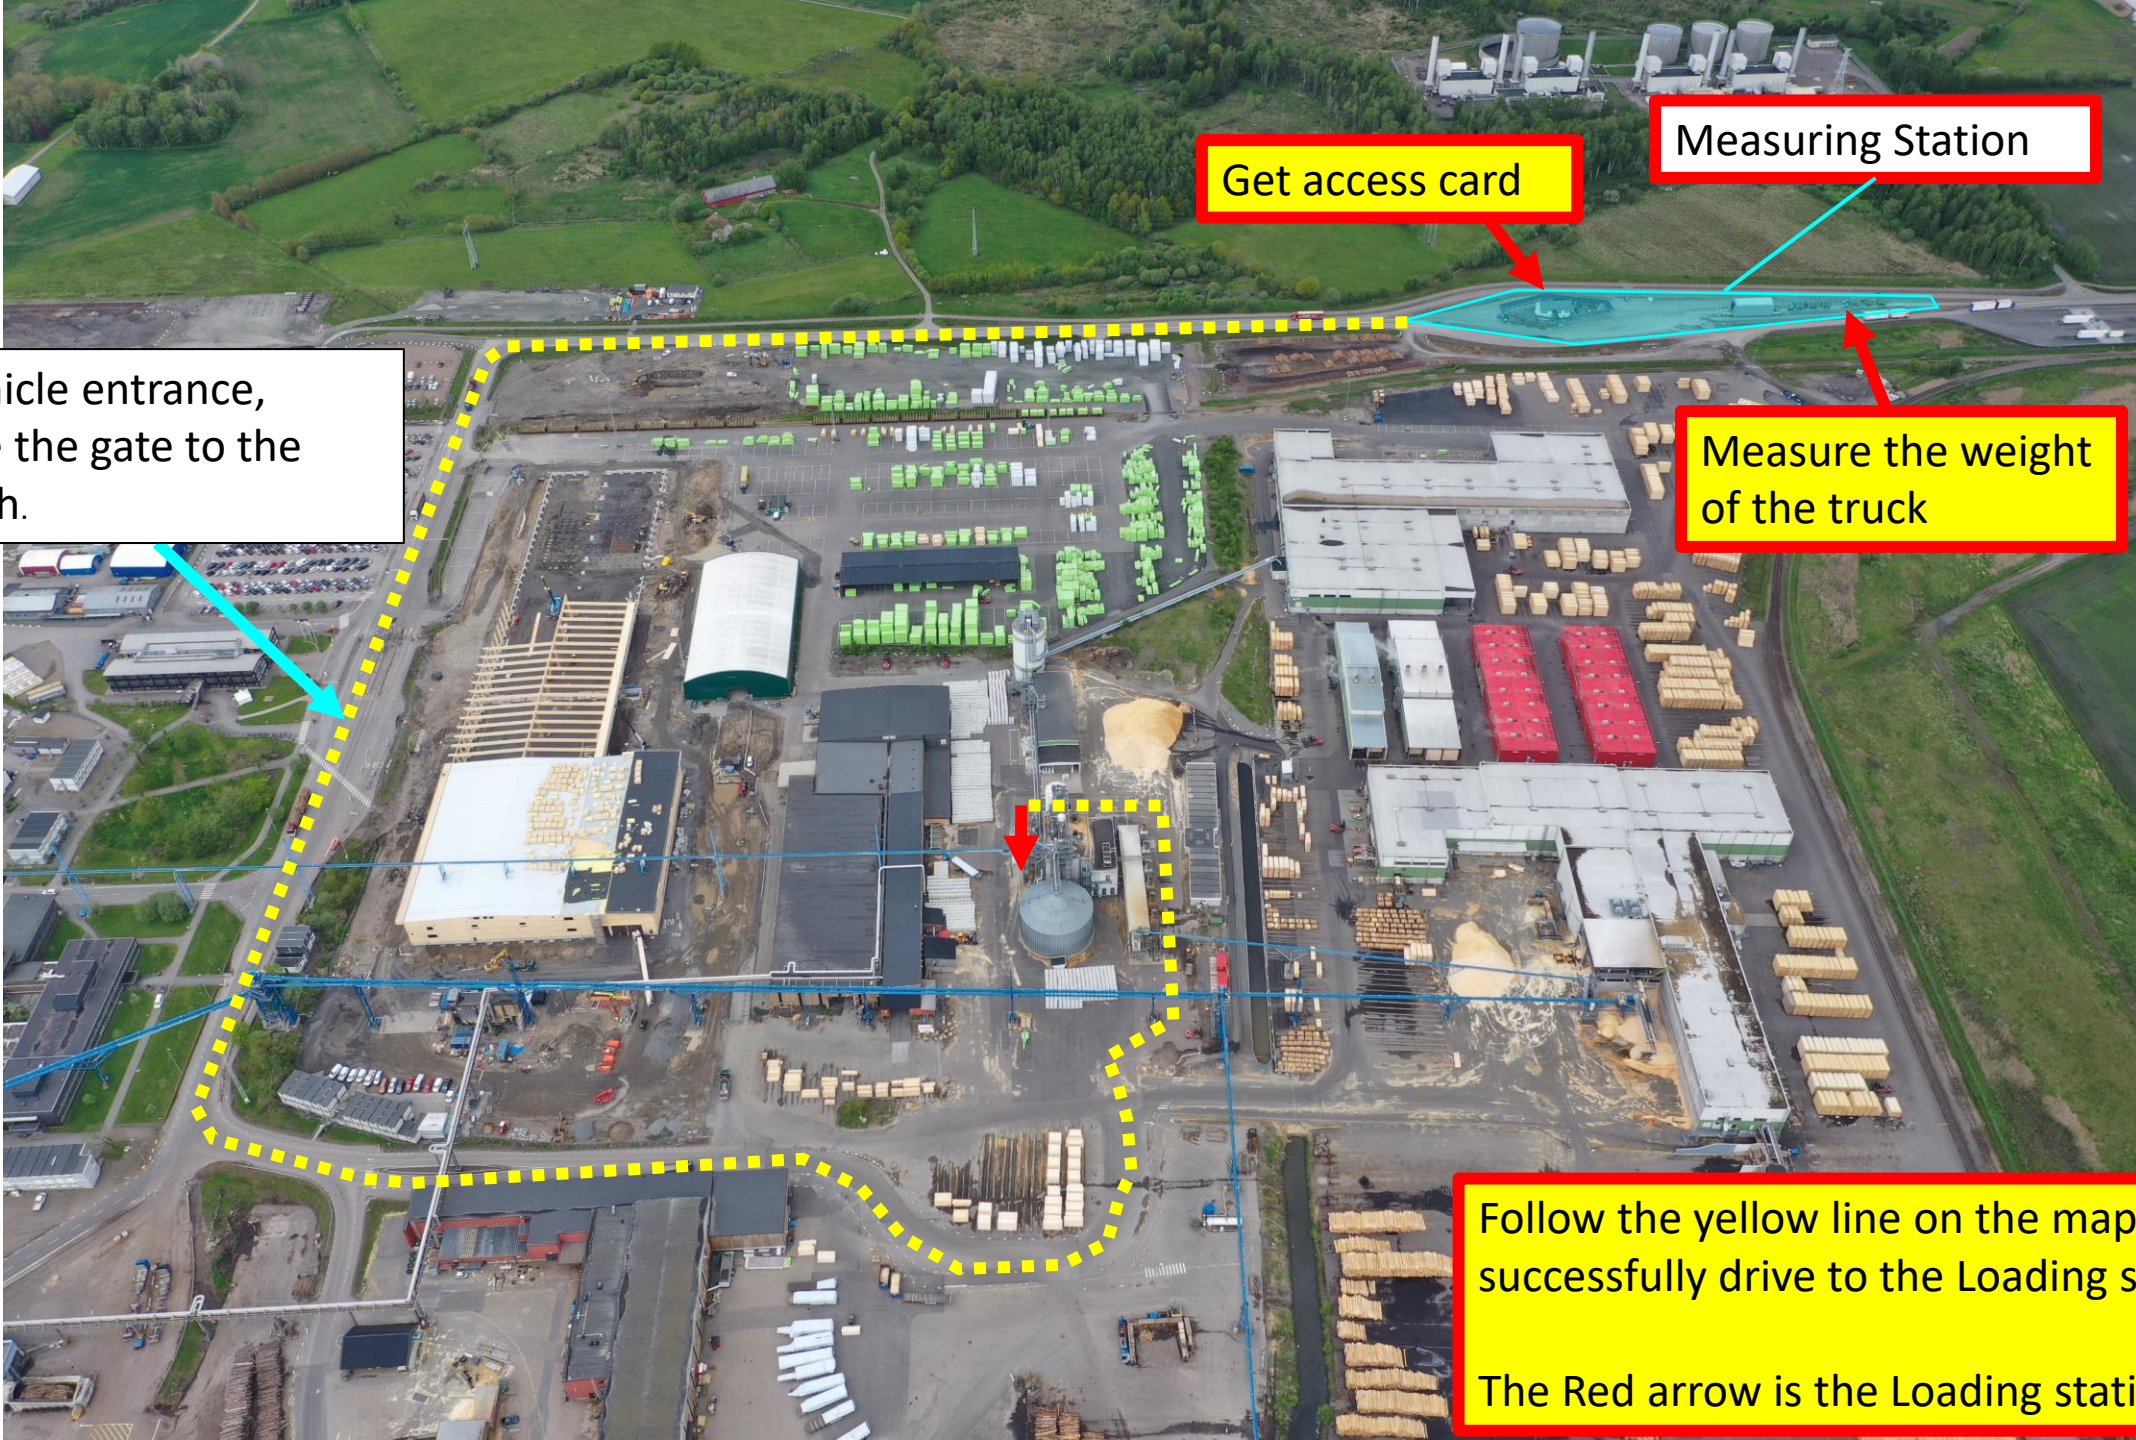

Get access card

Measuring Station

Vehicle entrance,
Use the gate to the
right.

Measure the weight
of the truck

Follow the yellow line on the map to
successfully drive to the Loading station.
The Red arrow is the Loading station.




NOTE: That you perform the loading yourself

Place your vehicle/truck under the loading station.

Yellow circle is the output of pellets.




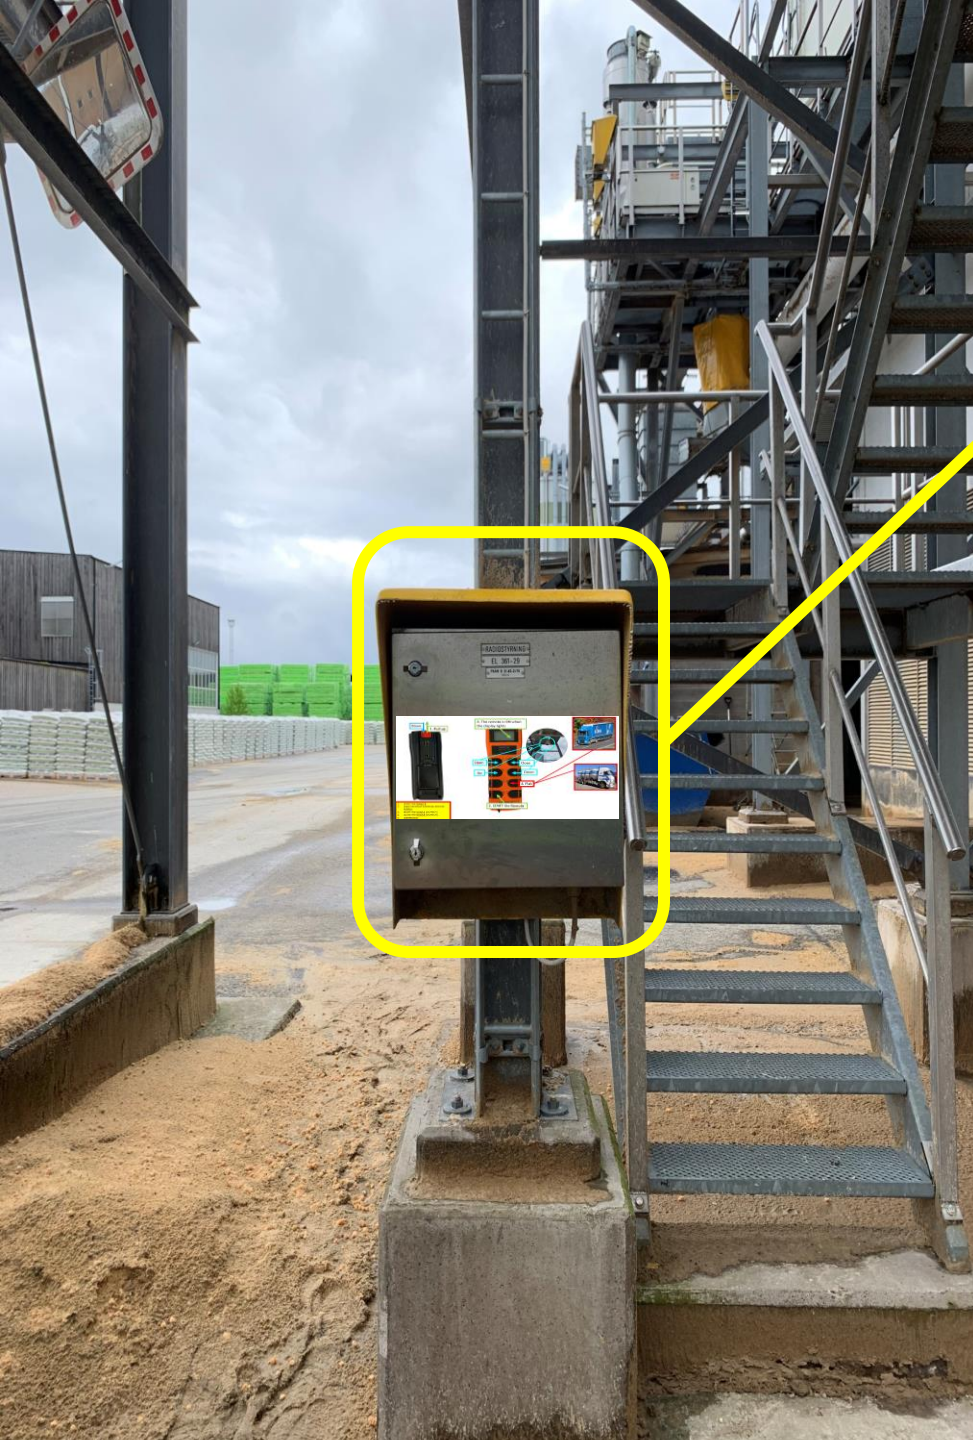

Next/beside to the loading station is a locker.
The remote is in this locker.
Follow the guide for the remote.



3. The remote is ON when the display lights

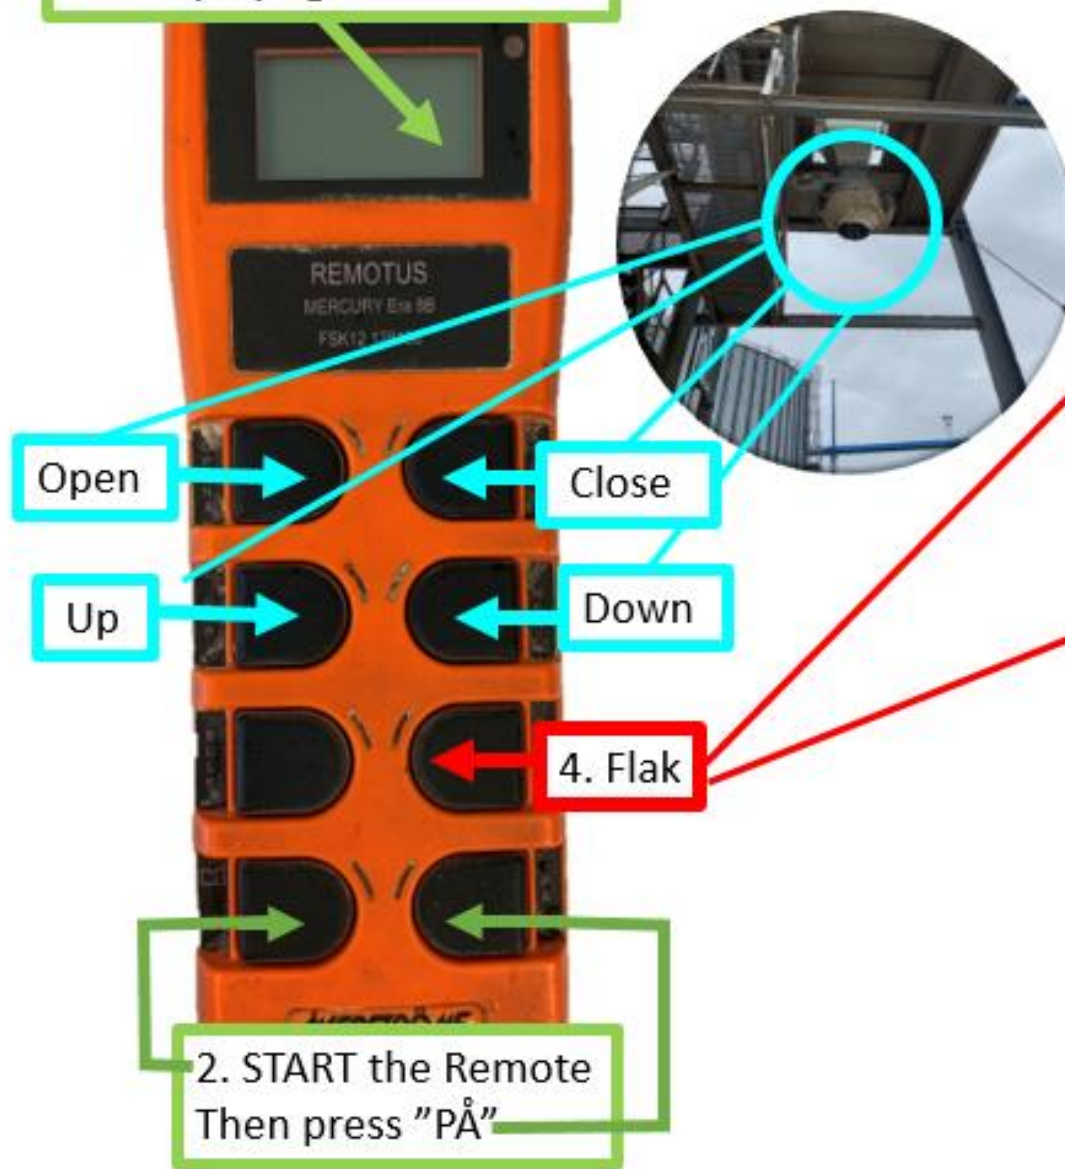

1. START THE REMOTE
2. FIND THE RIGHT POSITION FOR THE NOZZLE
3. START THE NOZZLE [OUTPUT]
4. CLOSE THE NOZZLE [OUTPUT]
5. COMPLETED


Park the truck.
Leave your
access card

Measuring Station

Follow the green line on the map when
you leave the Loading station.

When you leave the area at the exit, you
need to weigh the truck. It is a small
house next to the gate.

The last step is to return the card at the
measuring station.

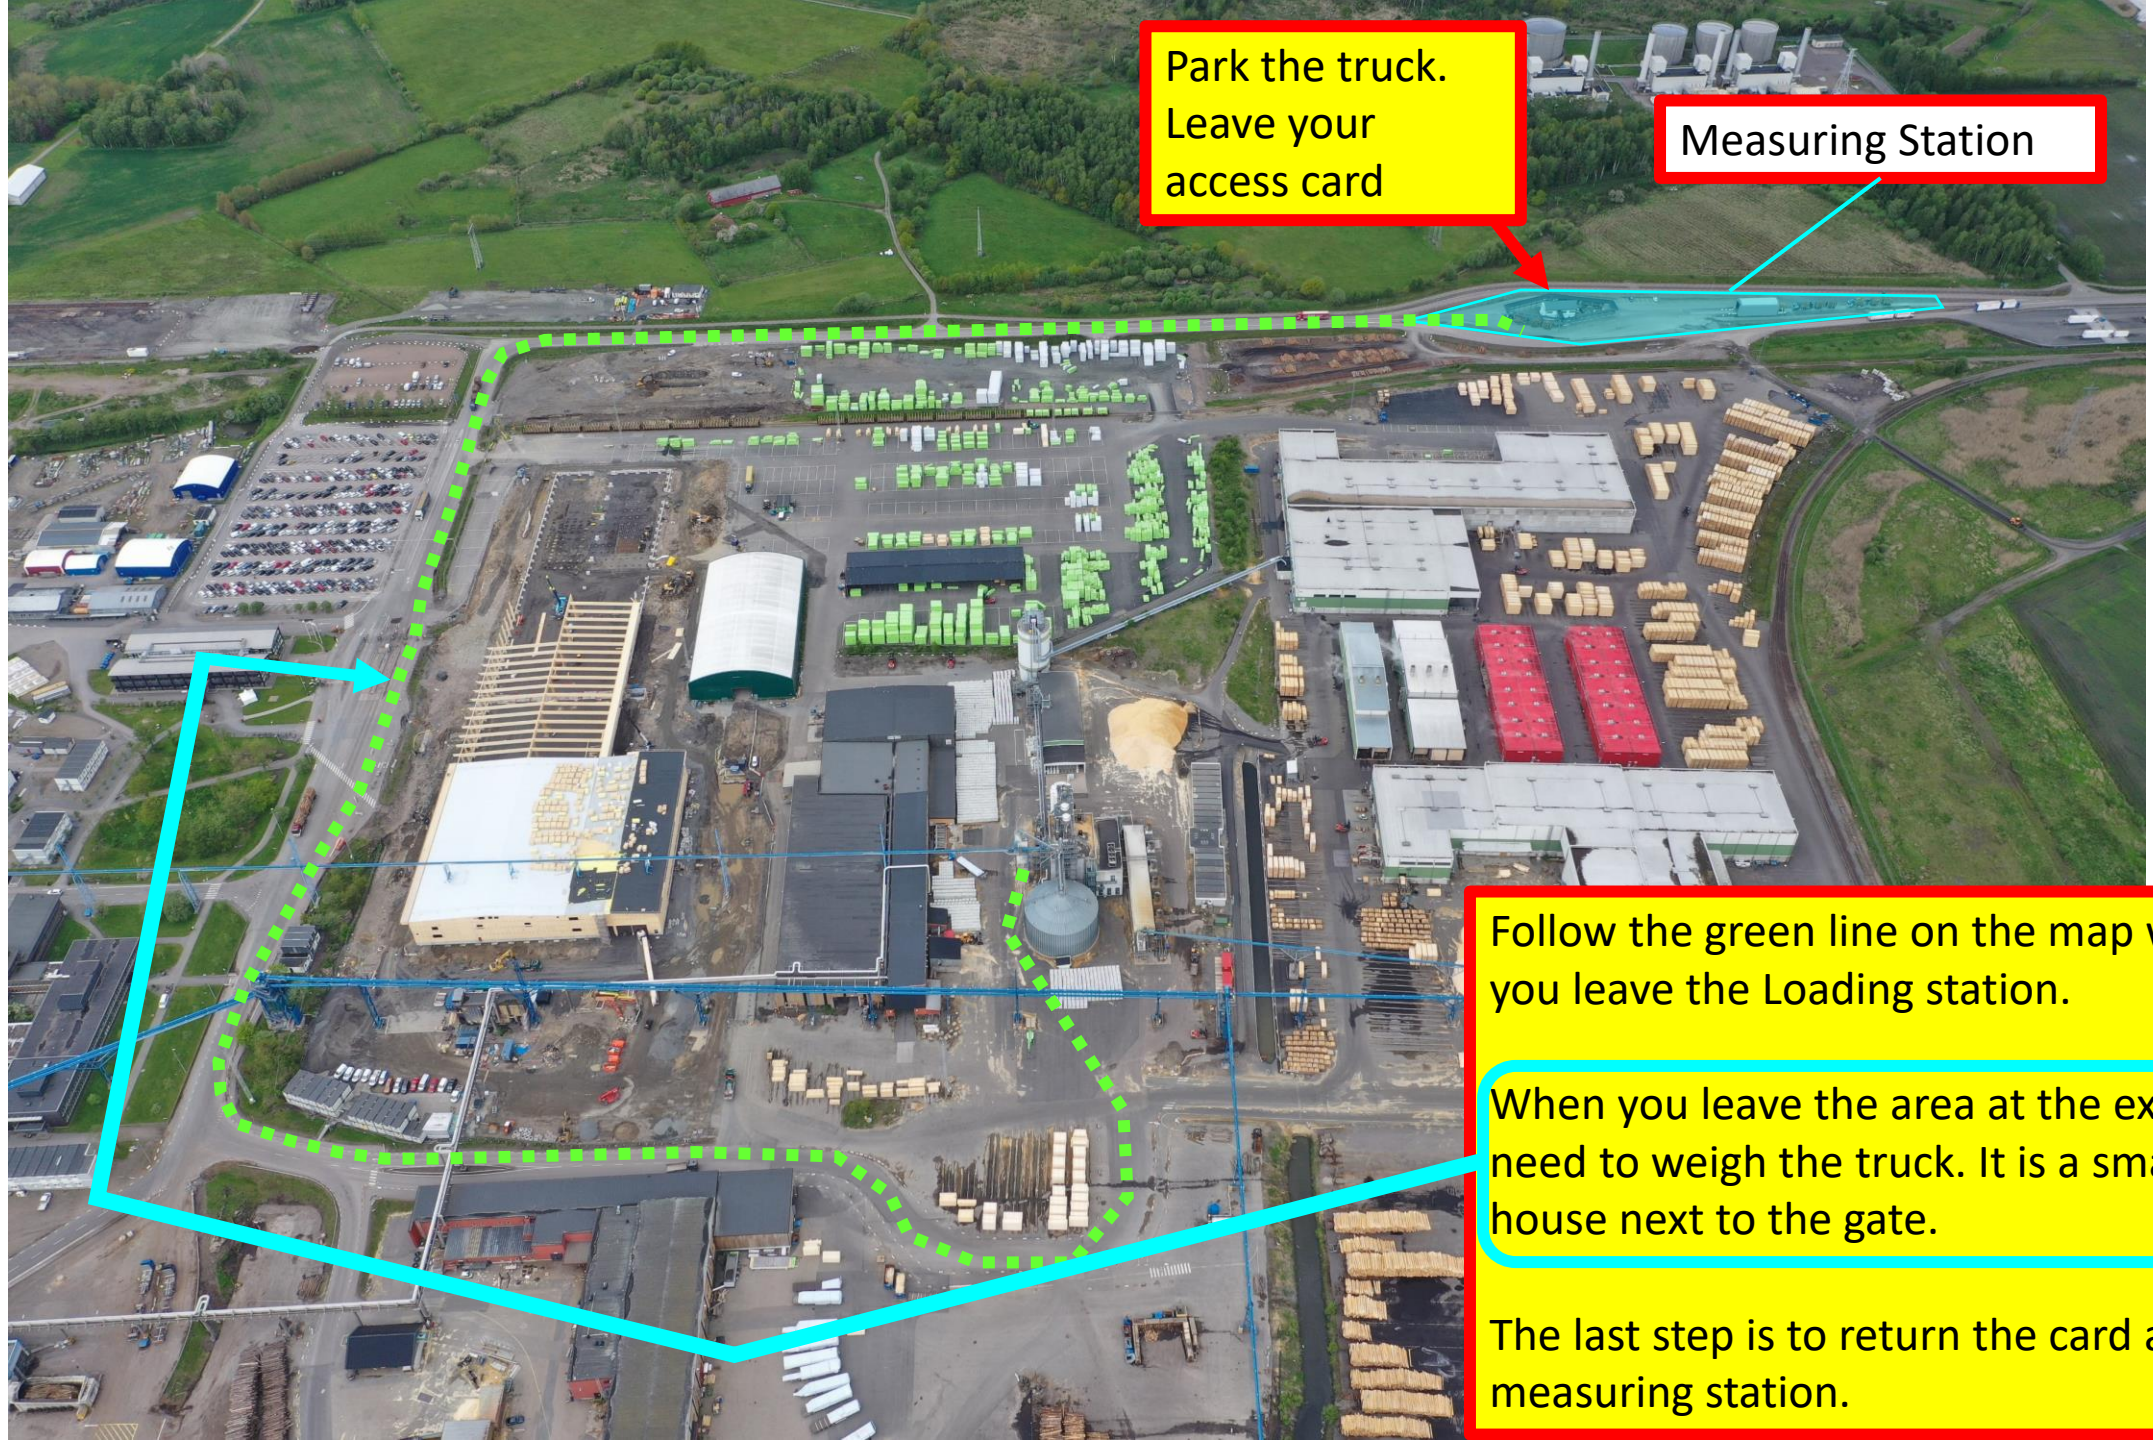

Measuring Station

Follow green line,
Park here



The last step is to return the
card inside the measuring station.